



Ferrite Beads

75 Actuator DC Motor Leads

FCD WCENIM2073-01 AQ (Part 19252)

Installation, Operation and Maintenance

Parts Included in Ferrite Bead Kit

Description	Quantity
Tubular Ferrite Beads	4
Lead Wire – Red	1
Lead Wire – Black	1
Wire Ties	3
Crimp-On Terminals	2

1. Begin by turning off the power and removing the cover.
2. Remove the motor leads from the front of terminals 3 and 4, making a note of which color motor lead goes where. Pull the motor leads free, back toward the motor(s).
3. Using the tubular ferrite beads, install a ferrite bead on each red and each black motor lead as close to the motor(s) as possible. Each motor lead should pass through its ferrite bead a minimum of three times.
4. Route the motor leads back to the front of terminals 3 and 4. If necessary, extend the motor leads with extra red and black wire pigtails (using the supplied pigtails and crimp-on terminals in the kit) to make the motor leads reach the front of terminals 3 and 4 if they are now too short. Take appropriate precautions to ensure that the junction of the extra wires with the existing motor leads is properly crimped. If there are two motors, crimp



- the two red motor leads together with the red pigtail and then run the single red lead back to the front of the actuator. Do the same with the two black motor leads and black pigtail.
5. Reconnect the motor leads to the front of terminals 3 and 4, ensuring that the appropriate color is returned to each terminal.
 6. Replace the cover and restore power to the unit.

FLowsERVE

Worcester Actuation Systems



Flowserve Corporation has established industry leadership in the design and manufacture of its products. When properly selected, this Flowserve product is designed to perform its intended function safely during its useful life. However, the purchaser or user of Flowserve products should be aware that Flowserve products might be used in numerous applications under a wide variety of industrial service conditions. Although Flowserve can (and often does) provide general guidelines, it cannot provide specific data and warnings for all possible applications. The purchaser/user must therefore assume the ultimate responsibility for the proper sizing and selection, installation, operation, and maintenance of Flowserve products. The purchaser/user should read and understand the Installation Operation Maintenance (IOM) instructions included with the product, and train its employees and contractors in the safe use of Flowserve products in connection with the specific application.

While the information and specifications contained in this literature are believed to be accurate, they are supplied for informative purposes only and should not be considered certified or as a guarantee of satisfactory results by reliance thereon. Nothing contained herein is to be construed as a warranty or guarantee, express or implied, regarding any matter with respect to this product. Because Flowserve is continually improving and upgrading its product design, the specifications, dimensions and information contained herein are subject to change without notice. Should any question arise concerning these provisions, the purchaser/user should contact Flowserve Corporation at any one of its worldwide operations or offices.

For more information about Flowserve Corporation, visit www.flowserve.com or call USA 1-800-225-6989.



FLOWSERVE CORPORATION
1978 Foreman Drive
Cookeville, TN38501
Phone 931-432-4021
Fax 931-432-5518
www.flowserve.com